## INSTRUCTIONS

## FOR ARGENT ADJUSTABLE WALL BRACKET & UNION

The Handpiece holder on the Argent Wall Bracket & Union is adjustable if required. There are 2 Allen Keys supplied in the box with the union for this purpose.

TO LOOSEN OR TIGHTEN: Use the smaller allen key (2.5mm) to loosen off the grub screw on the underside of the shower handpiece holder.



Once loosened, use the larger short-leg allen key (4mm) to tighten or loosen the friction controller (on the inside of the handpiece holder).

Once it is at the desired friction, retighten the grubscrew on the underside with the smaller allen key.

Technical Advice Hotline 1800 356 717 email: ac@argentaust.com.au www.argentaust.com.au



IIARG-ADJ WALL BRACKET/UNION