
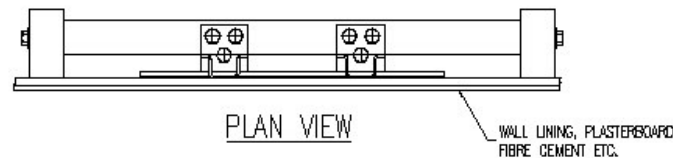
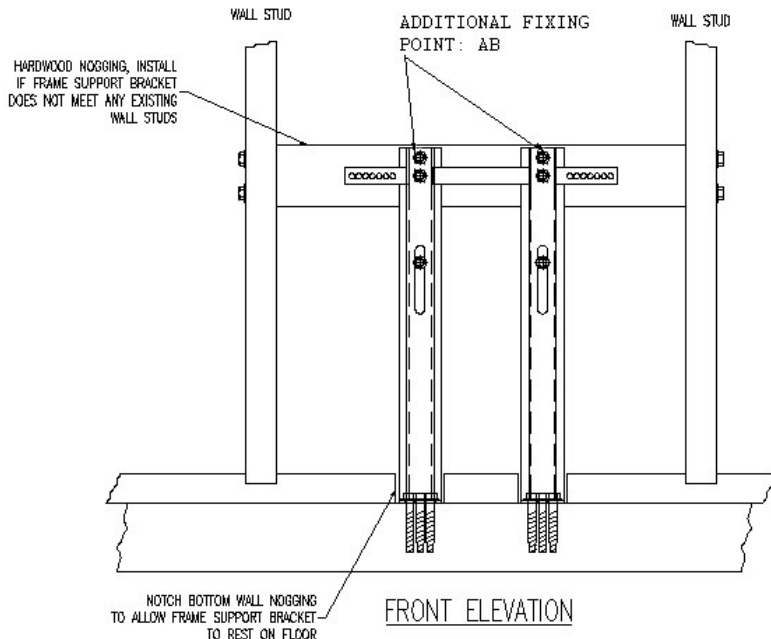


# Frame Support Bracket

## Installation Instructions

Product Code 9954

Suitable for Wall-Hung Pans and Bidets

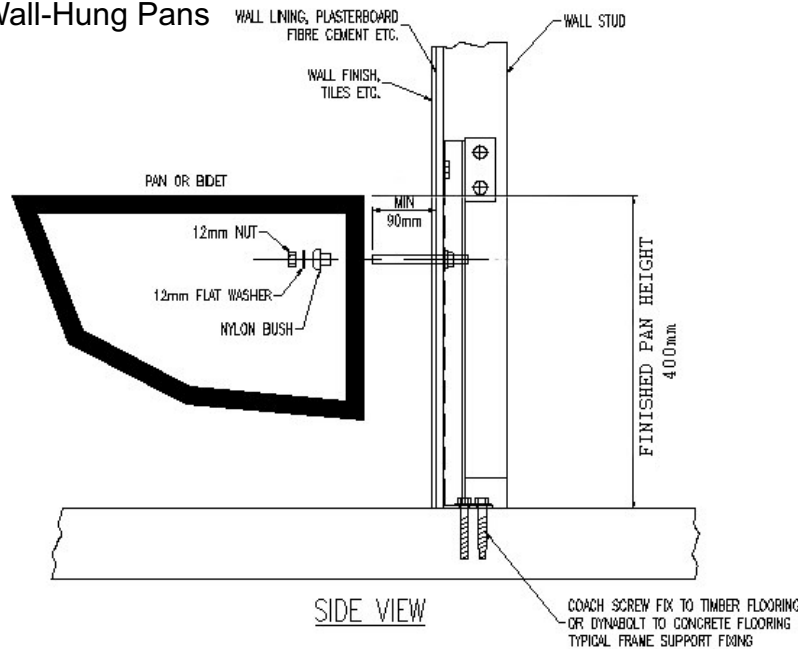

1. Brackets are to be secured to reinforced concrete floor through all three fixing points in base plate with dyna bolts or approved anchor fixings, and supported to timber or steel wall studs by way of the pre-punched bracing strap supplied
2. Bracing to be fixed to brackets with countersunk bolt & nut.  
Additional fixing point through the upper front face of uprights (AB) is available (directly above the bracing countersunk bolt hole) to secure the tops of the bracket uprights to timber noggin fitted by builder - if required.
3. In buildings with timber floors and timber frames, the brackets are to be bolted through floor and through timber noggin located between the floor joist and secured with appropriate size coach screws/ bolts.  
Support the bracket to timber wall studs by way of bracing strap supplied-bracing to be fixed to brackets with countersunk bolt & nut. Additional fixing point through the upper front face of uprights (AB) is available.
4. The threaded bolt set supplied (for pan fixing) must extend past the finished wall surface by a minimum of 90mm to accommodate varying brands and models of wall pans & bidets.  
Ensure this measurement is confirmed relative to the model pan or bidet to be fitted.

**The recommended height from finished floor to top of pan or bidet is 400mm - refer side elevation drawing**

Technical Advice Hotline 1800 356 717

