


Nexion Installation Instructions




Assembling the support by means of the simple and rapid sliding system.

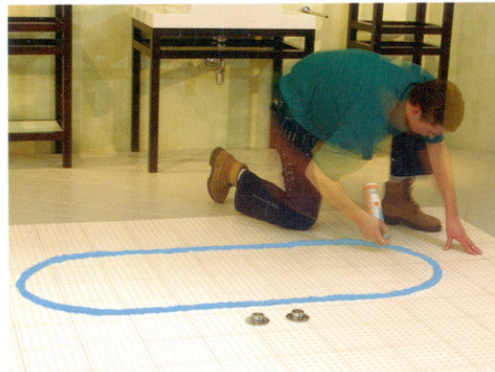

After having determined the position of the bath, you have to mark the outline of the support on the floor and then fill the marked outline with installation foam.



Placing the support on the polyurethane foam and, using a water level, making sure the construction is perfectly horizontal (placing it on an uneven/a not completely flat floor is not a problem).

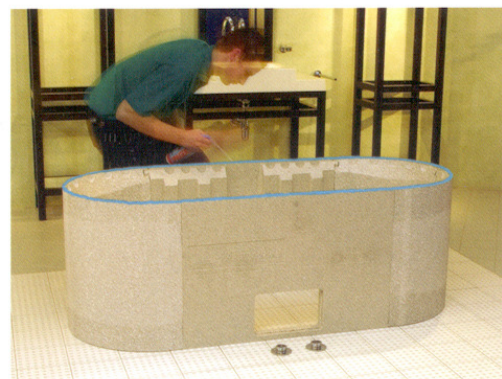

Before placing the bath into the bath housing, fix the special waste/overflow combination on the bath. After that, put installation foam on the support.



Placing the bath on the support and making sure it is perfectly horizontal. Through the service hatch, the waste/overflow combination can be connected to the waste.



Technical Advice Hotline 1800 356 717