

Architectura Start & Embrace Shower Systems

- Montageanleitung
- **GB** Installation instructions
- FR Instructions de montage
- ES Instrucciones de instalación








NOTES PRIOR TO INSTALLATION

- 1. INSPECT ALL PARTS PRIOR TO INSTALLATION FOR SUITABILITY AND/ OR DEFECTS
- 2. ANY SUSPECTED DEFECT SHOULD BE REPORTED AS SOON AS POSSIBLE
- 3. SHOULD ANY PRODUCT BE INSTALLED DESPITE A FAULT HAVING BEEN FOUND AND REPORTED, ARGENT WILL NOT ACCEPT LIABILITY FOR THE COST OF LABOUR TO REMOVE AND INSTALL ANY REPLACEMENT PRODUCT/S

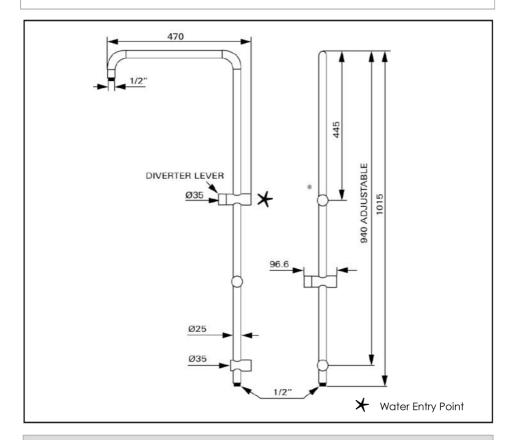

COMPONENT CHECK LIST


- 1. Shower system rail with slide and wall mount brackets
- 2. Three function handpiece
- 3. 1500mm gloss Silverflow Shower hose
- 4. Overhead Shower
- 5. Bag of fittings, screws and wall plugs

SHOWER SYSTEM



INSTALLATION

- 1. Attach shower system adaptor to water entry point
- 2. Mark and measure adjustable bottom wall bracket location
- 3. Secure the bottom wall mount bracket to the wall
- 4. Slide the shower system rail into to the wall mount brackets and over the installed adaptor, fasten the grub screws
- 5. Connect the overhead shower, handpiece and hose to the shower system
- 6. Clean any packaging or installation debris from the site

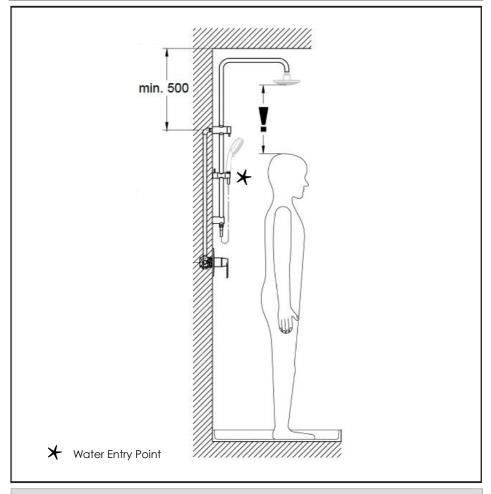

IMPORTANT

1. Minimum height to ceiling from water entry point 500mm



SHOWER SYSTEM

PRESSURE AND TEMPERATURE REQUIREMENTS

- 1. Inlet pressure range 100 500kpa
- 2. Maximum hot water temperature 60 C
- 3. AS/NZS 3500 requires 500kpa maximum operating pressure at any outlet within a building

Please direct any feedback for this product to Customer Central: support@customer-central.com.au or call 1300 364 748



IMPORTANT

Pressure and Temperature requirements.

- Inlet pressure range 100 500kpa
- Maximum hot water temperature 60 C
- AS/NZS 3500 requires 500 kPa maximum operating pressure at any outlet within a building



