


## **ARGENT BOTTLE TRAP INSTRUCTIONS - P TRAP 28928**

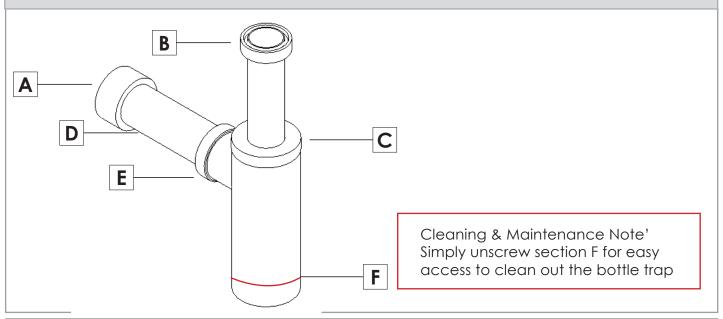

## INSTALLATION

- 1. Lubricate all 4 internal o-rings of adaptor (A) with Silicon based grease.
- 2. Cut 40mm PVC protruding through the wall to length required for chrome adaptor (A) to finish flush against wall
- 3. Slip Adaptor (A) over PVC
- 4. Lightly position Argent Bottle Trap under basin waste and tighten locking nut (B) to basin waste
- 5. Loosen nut (C) and adjust height of Argent Bottle Trap so that the back water exit is in position to allow for a 5 Deg fall back to the wall, then tighten locking nut (C)
- 6. Cut 40mm chrome pipe (D) to length required to fit between the back of the Argent Bottle Trap and the adaptor (A)
- 7. Remove Argent Bottle Trap from basin waste
- 8. Twist & push copper pipe (D) fully into adaptor (A)
- 9. Loosen backing nut (E), remove the o-ring and place this nut and o-ring over the end of chrome pipe (D)
- 10. Slide the back water exit of the Argent Bottle Trap over the chrome tube, then slide the locking nut and o-ring into position and tighten
- 11. Re-attach the locking nut (B) to the basin waste and tighten

Please direct any feedback for this product to Customer Central: support@customer-central.com.au or call 1300 364 748



NOTE: All fittings are

All fittings are designed to be hand tightened only.