


Argent Bottle Trap Instructions – S Trap

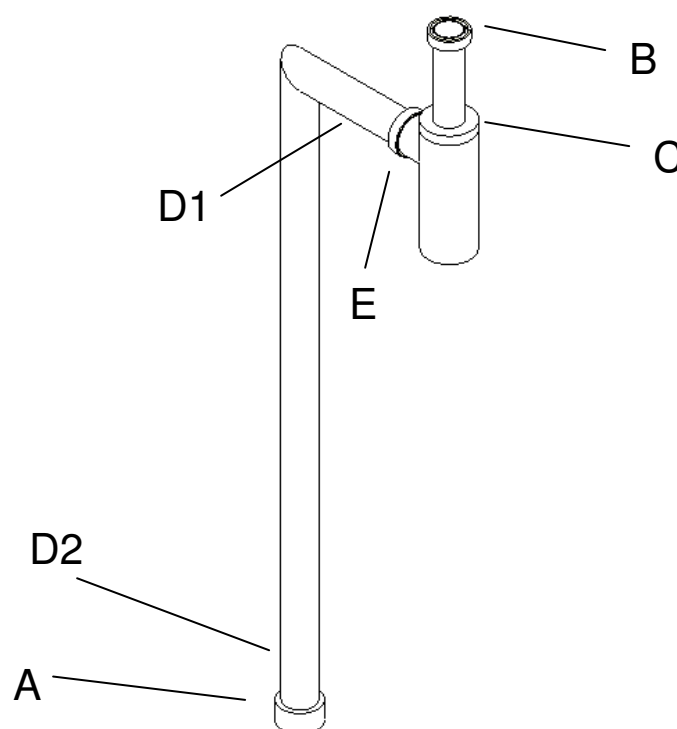

1. Lubricate all internal o-rings of adaptor (A) with Silicon based grease.
2. Cut 40mm DWV protruding from the floor to length required for chrome adaptor (A) to finish 15mm above the finished floor, DWV pipe must be solid in the floor to prevent slipping
3. Slip Adaptor (A) over DWV
4. Lightly position Argent Bottle Trap under basin waste and tighten locking nut (B) to basin waste
5. Loosen nut (C) and adjust height of Argent Bottle Trap so that the back water exit is in position to allow for fall back to the wall, then tighten locking nut (C)
6. Cut chrome pipe (D) to length required to fit between the back of the Argent Bottle Trap and the adaptor (A) (note: both ends (D1 and D2) can be trimmed to allow for Bottle Trap height and Bottle Trap distance from floor waste)
7. Remove Argent Bottle Trap from basin waste
8. Twist & push copper pipe (D2) fully into adaptor (A)
9. Loosen backing nut (E), remove the o-ring and place this nut and o-ring over the end of chrome pipe (D1)
10. Slide the back water exit of the Argent Bottle Trap over the chrome tube, then slide the locking nut and o-ring into position and tighten
11. Re-attach the locking nut (B) to the basin waste and tighten

NOTE: All fittings are designed to be hand tightened only.