

INSTALLATION TIPS

CARE + MAINTENANCE

Care must be taken to dry any spillage or leakage of water which may gain access to furniture. It is recommended that vanities are installed to avoid splashes from wet areas such as baths, spas and showers.

All wood composite veneers and polyurethane lacquer are water resistant only. To ensure the quality of finish is maintained, wipe up all spills with a clean lightly moistened cloth as soon as they occur. Use only a soft cloth, or a weak solution of non-abrasive detergent. Do not expose to excessive heat e.g. from hot hair styling equipment or naked flames.

To restore accidental scratches, burns etc. on two pack polyurethane parts or acrylic tops, rub gently with car cutting compound, car polish or household brass/silver cleaner.

To restore accidental scratches, burns etc. on veneer parts, paint with similar coloured wood restoration pens, let settle for one minute and wipe off excess with soft cloth.

WARRANTY INFORMATION

The Argent furniture warranty applies to Argent furniture only. The Argent Warranty is 5 years against manufacturing fault.

Finishes

All finishes are warranted against chipping and flaking, excluding normal wear and tear for five (5) years from date of purchase. Fading of colour due to excessive exposure to sunlight is excluded from the warranty.

Exclusions

This warranty is for normal domestic limited use only and excludes any defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage, improper installation or other alterations or modifications which affect the reliability or performance of the unit that are not attributable to faulty manufacture.

For full Warranty information visit www.argentaust.com.au



Brisbane
Level 3 / 18 Wandoo Street
Fortitude Valley QLD 4006

Sydney
80 Abercrombie Street
Chippendale NSW 2008

Melbourne
198 Coventry Street
South Melbourne VIC 3205


Perth
Unit 1 / 40 Collingwood Street
Osborne Park WA 6017

Technical Advice
1800 356 717

Fax
1300 656 057


www.argentaust.com.au

STORE THIS
DOCUMENT
FOR YOUR
WARRANTY
RECORDS

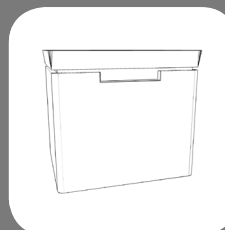


CD20SW0501

Centra 500mm
1 drawer wall hung

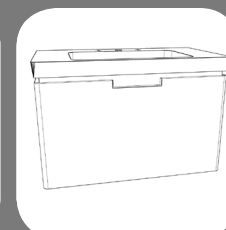


CD20SW0801

Centra 800mm
1 drawer wall hung

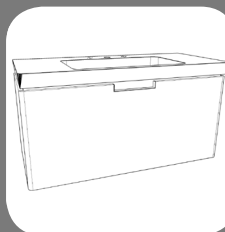


CD20SW1001

Centra 1000mm
1 drawer wall hung

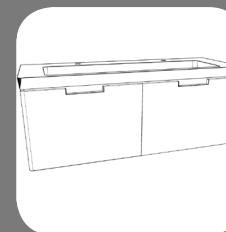

CD20SW1301

Centra 1300mm
2 drawer wall hung

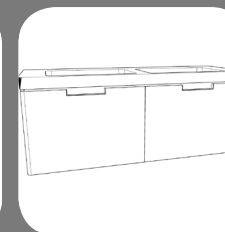

CD20DW1301

Centra 1300mm
2 drawer wall hung

Centra Range with Drawers

IMPORTANT:

IT IS NECESSARY TO SECURE THE CABINET THROUGH THE SOLID BACK BOARD INTO A SECURE SUBSTRATE.

FOR CAVITY WALLS, CABINET MUST BE SECURED THROUGH THE WALL INTO EITHER WALL STUDS OR NOGGINS.

FOR SOLID WALLS, SUITABLE WALL PLUGS/FIXINGS WILL NEED TO BE USED.

PRIOR TO INSTALLATION

Argent recommends a qualified trade person fit your bathroom furniture. Ensure your furniture is installed to relevant building codes and Australian Standards.

Please note, Argent will not be liable for the cost of installation or removal of the furniture and the warranty will be voided if damage occurred during or after installation.




MEASURE & MARK

Fit wall hung basin at required height to secure stud or frame, ensure level. Remove (1) drawer of cabinet and set aside carefully.

Locate wall studs to secure cabinet. Measure and mark fixing positions for drilling. Fix through multiple studs/noggins to ensure secure fixing, a minimum of 6 fixing positions is required. For solid walls, use fixings appropriate to your wall substrate. Mark and cut holes in the cabinet for hot and cold water inlets and waste exit pipe as required. See relevant specification sheet for specific cut outs.

INSTALLATION

Fit the wall hung cabinet to the required height and location to studs and/or solid substrate, ensure the cabinet is level. The drawer of cabinet can be removed by pulling the clasps on the underside front towards the outer edge of the drawer. Set the drawer aside carefully.

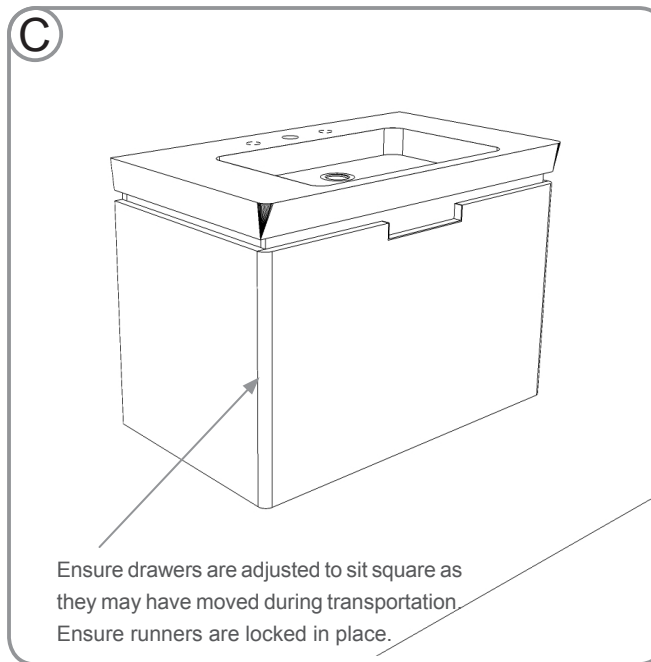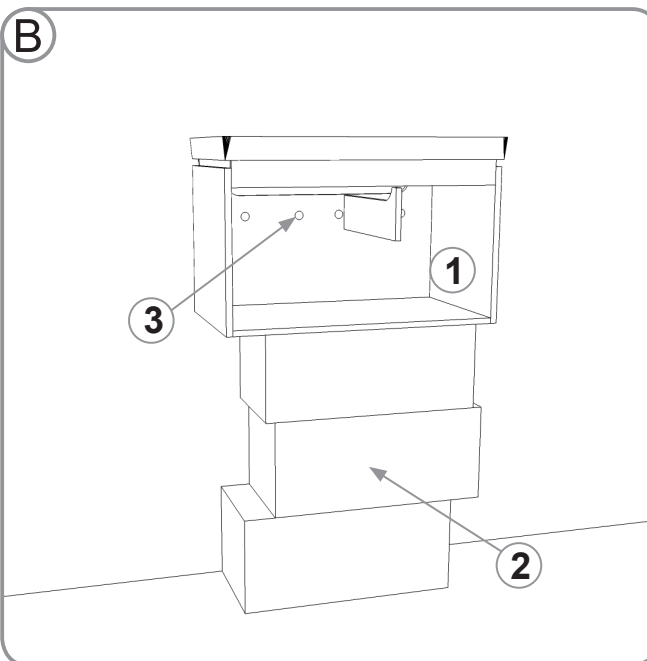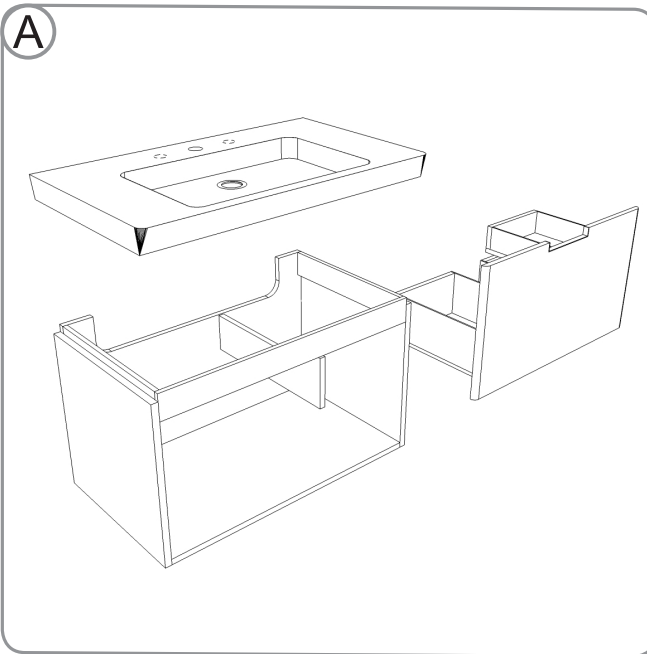

FITTING TAPWARE & WASTE

If tapware and waste are still to be fitted, the drawer of cabinet can be removed by pulling the clasps on the underside front towards the outer edge of the drawer. Set the drawer aside carefully. Fit tapware and waste to the basin.

Test to ensure there are no leaks.


Replace the drawer.

FIT OFF, ADJUST & FINISH

Replace drawer and adjust to ensure all square with the installed vanity. Put a bead of bathroom grade silicon around the rear edge of the stone top & or basin where they touch the wall & or the stone top for sealing.

Drawer Release

Feel under the drawer for release catches. Squeeze catches, lift up and towards you to release the drawer from the runners.

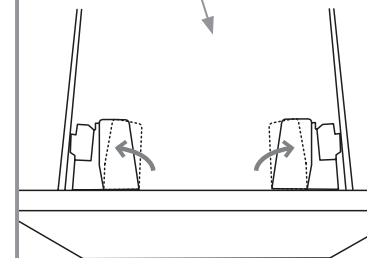

Basin Sealing

IMPORTANT:

USE ONLY bathroom grade silicon sealant

Epoxy type glues MUST NOT BE USED.

Put a bead of bathroom grade silicon around the back edge of the basin and where the basin touches the wall. Do not tighten the basin bolts to avoid damaging the basin.

IMPORTANT:

INSPECT THE FURNITURE TO ENSURE NO DAMAGE HAS OCCURRED DURING TRANSIT.

IF DAMAGE HAS OCCURRED, OR VISIBLE DEFECTS EXIST, DO NOT PROCEED WITH INSTALLATION AND ADVISE ARGENT IMMEDIATELY.