


Argent Cosmo Bottle Trap Instructions – P Trap

ITEM # 28927

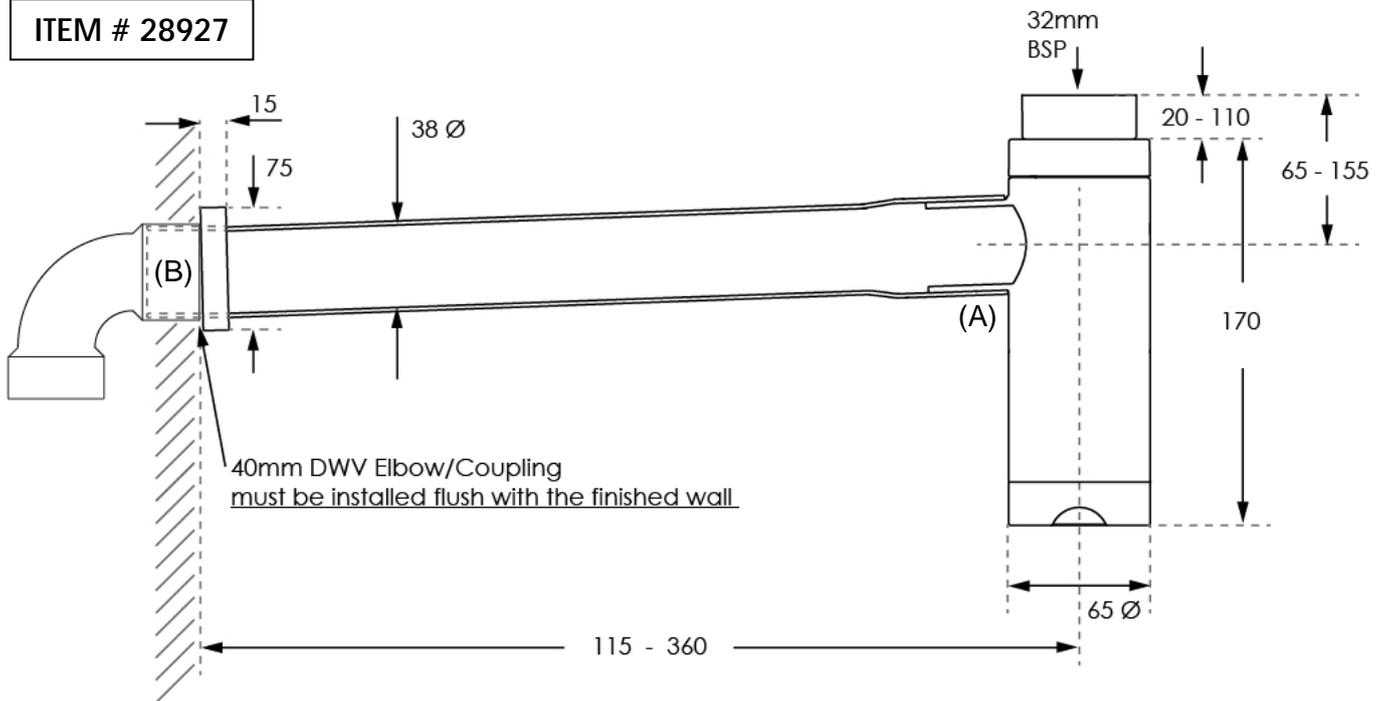

1. Ensure that the 40mm DWV female elbow/coupling in the wall is finished flush with the finished wall.
2. To calculate the length of the waste pipe, fit the bottle trap to the basin, measure from the stepped shoulder (A) on the bottle trap to the 40mm DWV elbow/coupling (B), and add 25mm for internal pipe connection.
3. Cut the waste pipe from the non-flared end at the calculated length. Remove any swarf from the cut end of the pipe.
4. Remove bottle trap from the basin.
5. Lubricate all O-rings and seals with silicon based grease.
6. Fit the waste pipe to the bottle trap ensuring it is fully coupled to the stepped shoulder of the bottle trap.
7. Slip the wall flange and then the rubber key seal onto the waste pipe. Lubricate the Key Seal.
8. Push fit the bottle trap and waste pipe to the DWV elbow/coupling.
9. Fit the bottle trap to the waste ensuring the height is adjusted to allow for fall to the wall.
10. Test to ensure the fittings are secure and that the bottle trap is water tight.

NOTE: All fittings are designed to be hand tightened only.

MAINTENANCE: The bottom of the bottle trap can be removed for cleaning with the bottle trap in-situ.

For more information contact the Technical Advice Hotline on free call 1800 356 717