

INSTALLATION TIPS

CARE + MAINTENANCE

Care must be taken to dry any spillage or leakage of water which may gain access to furniture. It is recommended that vanities are installed to avoid splashes from wet areas such as baths, spas and showers.

All wood composite veneers and polyurethane lacquer are water resistant only. To ensure the quality of finish is maintained, wipe up all spills with a clean lightly moistened cloth as soon as they occur. Use only a soft cloth, or a weak solution of non-abrasive detergent. Do not expose to excessive heat e.g. from hot hair styling equipment or naked flames.

To restore accidental scratches, burns etc. on two pack polyurethane parts or acrylic tops, rub gently with car cutting compound, car polish or household brass/silver cleaner.

WARRANTY INFORMATION

The Argent furniture warranty applies to Argent furniture only. The Argent Warranty is 5 years against manufacturing fault.

Finishes

All finishes are warranted against chipping and flaking, excluding normal wear and tear for five (5) years from date of purchase. Fading of colour due to excessive exposure to sunlight is excluded from the warranty.

Exclusions

This warranty is for normal domestic limited use only and excludes any defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage, improper installation or other alterations or modifications which affect the reliability or performance of the unit that are not attributable to faulty manufacture.

For full Warranty information visit www.argentaust.com.au



Brisbane
Level 3 / 18 Wandoo Street
Fortitude Valley QLD 4006

Sydney
80 Abercrombie Street
Chippendale NSW 2008

Melbourne
198 Coventry Street
South Melbourne VIC 3205


Perth
Unit 1 / 40 Collingwood Street
Osborne Park WA 6017

Technical Advice
1800 356 717


Fax
1300 656 057

www.argentaust.com.au


STORE THIS
DOCUMENT
FOR YOUR
WARRANTY
RECORDS

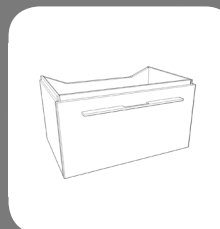


KT10SW0601SB
Kato 670mm
1 drawer wall hung
counter top

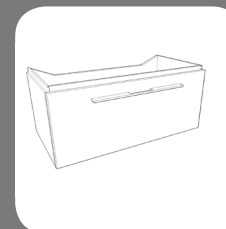


KT10SW0801SB
Kato 860mm
1 drawer wall hung
counter top

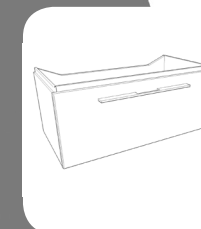


KT10SW1001SB
Kato 1050mm
1 drawer wall hung
counter top

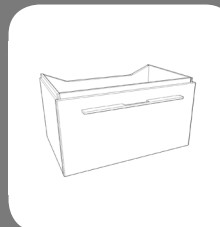


KT10SW0601ZB
Kato 670mm
1 drawer wall hung
under counter

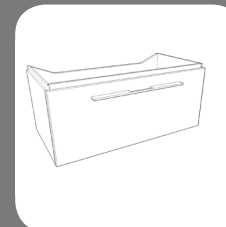


KT10SW0801ZB
Kato 860mm
1 drawer wall hung
under counter

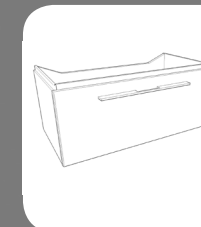


KT10SW1001ZB
Kato 1050mm
1 drawer wall hung
under counter

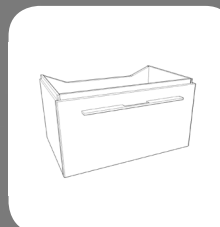

KT10SW0601DB
Kato 670mm
1 drawer wall hung
drop in

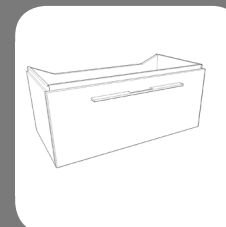

KT10SW0801DB
Kato 860mm
1 drawer wall hung
drop in

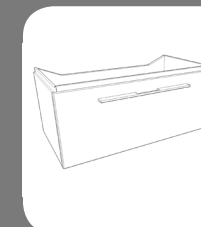

KT10SW1001DB
Kato 1050mm
1 drawer wall hung
drop in

**Kato Range
with Stone Tops**

PLEASE INSPECT THE CABINET, STONE TOP AND BASIN TO ENSURE NO DAMAGE HAS OCCURED DURING TRANSIT. IF DAMAGE HAS OCCURRED, OR VISIBLE DEFECTS EXIST, DO NOT PROCEED WITH INSTALLATION AND ADVISE ARGENT IMMEDIATELY ON 1300 364 748

IMPORTANT:

IT IS NECESSARY TO SECURE THE CABINET THROUGH THE SOLID BACK BOARD INTO A SECURE SUBSTRATE.

FOR CAVITY WALLS, CABINET MUST BE SECURED THROUGH THE WALL INTO EITHER WALL STUDS OR NOGGINS.

FOR SOLID WALLS, SUITABLE WALL PLUGS/ FIXINGS WILL NEED TO BE USED.

PRIOR TO INSTALLATION

Argent recommends a qualified trade person fit your bathroom furniture. Ensure your furniture is installed to relevant building codes and Australian Standards. Please note, Argent will not be liable for the cost of installation or removal of the furniture and the warranty will be voided if damage occurred during or after installation.

MEASURE & MARK

Locate wall studs to secure cabinet. Measure and mark fixing positions for drilling. Make allowance for the height of the stone top and basin style being used ie. Counter top basins will invite a lower cabinet height than other basin styles. Fix through multiple studs/noggins to ensure secure fixing, a minimum of 6 fixing positions is required. for solid walls, use fixings appropriate to your wall substrate. Mark and cut holes in the cabinet for hot and cold water inlets and waste exit pipes as required. See relevant specification sheet for specific cut outs.



INSTALLATION

Fit the cabinet at the required height and/or location to studs and/or solid substrate, ensure the cabinet is level. The drawer of cabinet can be removed by pulling the clasps on the underside front towards the outer edge of the drawer. Set the drawer aside carefully.

STONE TOP INSTALLATION

UNDER COUNTER BASIN INSTALLATION

Under counter basins are supplied pre-fitted to stone top - proceed to INSTALLING STONE TOP.

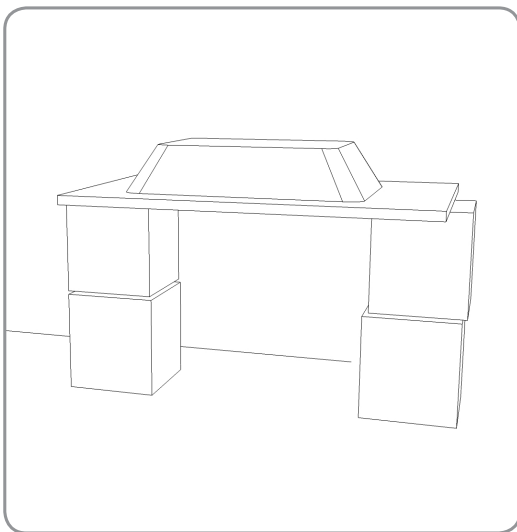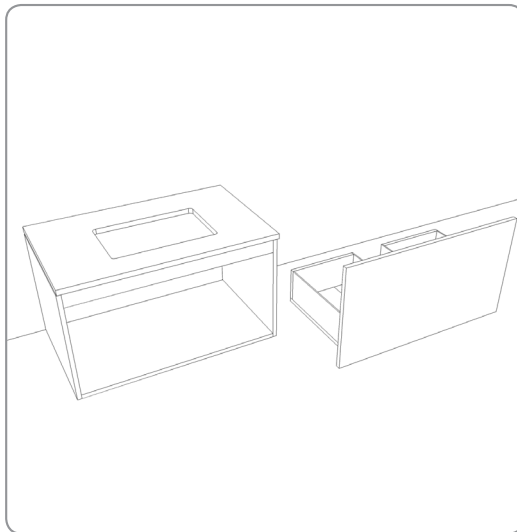

DROP IN & SEMI RECESSED BASIN INSTALLATION

Drop in & counter top basins can be installed after the stone top is installed onto the cabinet.

INSTALLING STONE TOP

Prior to installing the stone top, tapware and waste can be fitted to the basin/ stone top to facilitate simpler access installation.

Ensure the edge of the cabinet and stone top are clean and free of detritus.

Test fit the stone top onto the cabinet to check alignment.

Remove the stone top and apply a bead of bathroom grade silicon on all four edges of the cabinet.

Install the stone top onto the cabinet confirming correct alignment.

Install tapware and waste into drop in & or counter top basin.

FITTING TAPWARE & WASTE

If tapware and waste are still to be fitted, the drawer of cabinet can be removed by pulling the clasps on the underside front towards the outer edge of the drawer. Set the drawer aside carefully. Fit tapware and waste to the basin.

Test to ensure there are no leaks.

Replace the drawer.


FIT OFF, ADJUST & FINISH

Replace drawer and adjust to ensure all square with the installed vanity.

Put a bead of bathroom grade silicon around the rear edge of the stone top & or basin where they touch the wall & or the stone top for waterproofing .

Drawer Removal

Feel under the drawer for release catches. Squeeze catches, pull out towards you to release the drawer from the runners.

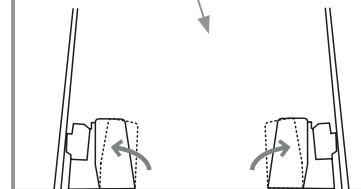

Basin Sealing

IMPORTANT:

USE ONLY bathroom grade silicon sealant

Epoxy type glues MUST NOT BE USED.

Put a bead of bathroom grade silicon around the back edge of the stone top where it touches the wall.

IMPORTANT:

INSPECT THE CABINET, STONE TOP AND BASIN TO ENSURE NO DAMAGE HAS OCCURRED DURING TRANSIT.

IF DAMAGE HAS OCCURRED, OR VISIBLE DEFECTS EXIST, DO NOT PROCEED WITH INSTALLATION AND ADVISE ARGENT IMMEDIATELY.