## INSTALLATION TIPS

#### CARE + MAINTENANCE

Care must be taken to dry any spillage or leakage of water which may gain access to furniture. It is recommended that vanities are installed to avoid splashes from wet areas such as baths, spas and showers.

All wood composite veneers and polyurethane lacquer are water resistant only. To ensure the quality of finish is maintained, wipe up all spills with a clean lightly moistened cloth as soon as they occur. Use only a soft cloth, or a weak solution of non-abrasive detergent. Do not expose to excessive heat e.g. from hot hair styling equipment or naked flames.

To restore accidental scratches, burns etc. on two pack polyurethane parts or acrylic tops, rub gently with car cutting compound, car polish or household brass/silver cleaner.

To restore accidental scratches, burns etc. on veneer parts, paint with similar coloured wood restoration pens, let settle for one minute and wipe off excess with soft cloth.

#### WARRANTY INFORMATION

The Argent furniture warranty applies to Argent furniture only. The Argent Warranty is 5 years against manufacturing fault.

#### Finishes

All finishes are warranted against chipping and flaking, excluding normal wear and tear for five (5) years from date of purchase. Fading of colour due to excessive exposure to sunlight is excluded from the warranty.

#### Exclusions

This warranty is for normal domestic limited use only and excludes any defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage, improper installation or other alterations or modifications which affect the reliability or performance of the unit that are not attributable to faulty manufacture.

For full Warranty information visit www.argentaust.com.au



#### **Brisbane**

Level 3 / 18 Wandoo Street Fortitude Valley QLD 4006

#### Sydney

80 Abercrombie Street Chippendale NSW 2008

#### Melbourne

206-208 Coventry Street South Melbourne VIC 3205

#### Perth

Unit 1 / 40 Collingwood Street Osborne Park WA 6017

## Technical Advice

1300 356 717

#### Fax

1300 656 057

www.argentaust.com.au

# STORE THIS DOCUMENT



### OP10SWL1001 Opus 1000mm LEFT 1 drawer wall hung



OP10SW1001 Opus 1000mm 1 drawer wall hung



OP10SW0801 Opus 800mm 1 drawer wall hung



OP10SWR1001
Opus 1000mm RIGHT
1 drawer wall hung




OP10DW1601
Opus 1600mm DOUBLE
2 drawer wall hung


**Opus Range** 



INSPECT THE FURNITURE TO ENSURE NO DAMAGE HAS OCCURRED DURING TRANSIT. IF DAMAGE HAS OCCURRED, OR VISIBLE DEFECTS EXIST, DO NOT PROCEED WITH INSTALLATION AND ADVISE ARGENT IMMEDIATELY.

FURNITURE MUST BE FITTED THROUGH STUDS INTO THE WALL. USE FIXING BRACKETS PROVIDED. IF STUD POSITIONING DOES NOT ALIGN WITH FIXING BRACKETS, CABINET MUST BE ADDITIONALLY SECURED THROUGH THE BACK BOARD TO STUDS. IF NO STUDS ARE FOUND TO SECURE THROUGH, NOGGINS MAY BE REQUIRED.

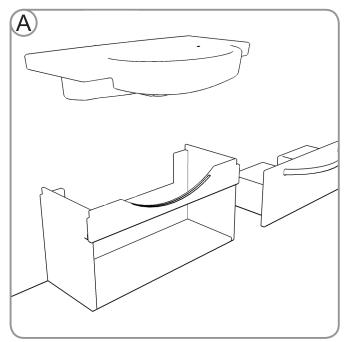

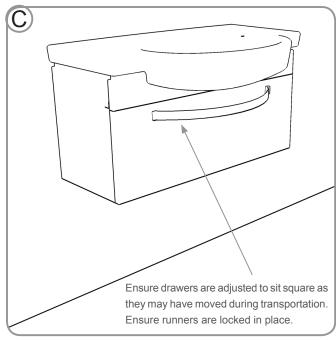


## A PRIOR TO INSTALLATION

Argent recommends a qualified trade person fit your vanity. Ensure your furniture is installed to relevant building codes and Australian Standards.

Please note, Argent will not be liable for the cost of installation or removal of the furniture and the warranty will be voided if damage occurred during or after installation.

Fit wall hung basin at required height to secure stud or frame, ensure level. Fit plumbing.

Remove (1) draws of vanity and set aside carefully. Hold vanity over pipes in correct position. Use (2) scrap blocks of wood to set at just under correct height.

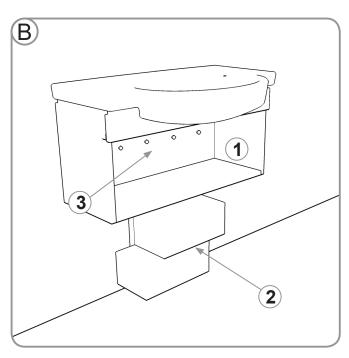

### **B** MEASURE & MARK

Find **(3)** in wall studs to secure to. Measure and mark position for drilling. Fix through a stud where possible. If no studs are found to secure through, special fixings may be required. Use fixings appropriate to your wall material.

## © FIT OFF, ADJUST & FINISH


Drill securing screws appropriate to your wall through furniture back board into stud and wall.

Replace drawer and adjust to ensure all square with the installed vanity.

Put a bead of waterproof mastic compound around the back edge of the basin and where the basin touches the wall. Do not over tighten the basin bolts, to avoid damaging the basin.

## Drawer Adjustment

Feel under the drawer for release catches. Squeeze catches, lift up and towards you to release the drawer from the runners.

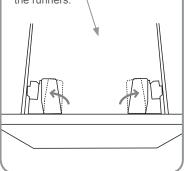

## **Basin Sealing**

## **IMPORTANT:**

USE ONLY bathroom grade silicon sealant

Epoxy type glues
MUST NOT BE USED.

Put a bead of waterproof mastic compound around the back edge of the basin and where the basin touches the wall. Do not tighten the basin bolts to avoid damaging the basin.

## **IMPORTANT:**

INSPECT THE FURNITURE TO ENSURE NO DAMAGE HAS OCCURRED DURING TRANSIT.

IF DAMAGE HAS
OCCURRED, OR VISIBLE
DEFECTS EXIST, DO
NOT PROCEED WITH
INSTALLATION AND ADVISE
ARGENT IMMEDIATELY.