

## INSTALLATION TIPS

### CARE + MAINTENANCE

Avoid acetone silicones upon installation, harsh chemicals and abrasive cloths when cleaning (as these will scratch the chrome surface), waxed based furniture creams (as these can result in a build up of deposits and may detract from the appearance). Clean using a soft soapy cloth and polish with a dry soft cloth and do not use undue pressure whilst cleaning. Ensure all new installations are fully flushed prior to installing the ceramic headparts to prevent any possible damage to the product and voiding of the warranty.

### LICENCED PLUMBER / INSTALLER

This water saving range of tapware and outlets have been fitted with flow restrictors which can create greater hydrostatic back pressure to the ceramic cartridge.

Always flush water inlet lines on new installations before fitting tapware to avoid damage to ceramic valve.

#### Please Note:

- These tapware sets contain ceramic disc 180° turn spindles.
- Product not installed by a licensed plumber or in accordance with relevant industry standards and regulations may void the manufacturers warranty terms & conditions.

Please ensure the operating pressure to all points in the building conforms to AS/NZS 3500.1 and does not exceed 500KPA .

Failure to limit the operating flow pressure, may void the warranty on this fixture.

### PRESSURE + TEMPERATURE REQUIREMENTS

Ensure operating water pressure is between 1-5 bar (100-500Kpa).

If pressure is in excess of 500Kpa fit pressure reduction valve to ensure installation conforms to AS/NZ 3500.1

This tapware set is not recommended for use with low pressure gravity feed water systems.

Maximum hot water temperature 80°C.

### WARRANTY

All Argent products are covered by a three (3) year warranty from the date of purchase. Argent will undertake to rectify free of charge for parts and labour, within this period any fault due to defects in materials or workmanship. Regardless of interim service within that period, the warranty shall expire after three (3) years from the date of original purchase.

### Finishes

All Argent finishes are warranted against chipping and flaking, excluding normal wear and tear for three (3) years from date of purchase.

### Headparts

All Argent replacement headparts will only be covered by warranty if the fault can be clearly shown to have existed as a result of defect in manufacture. There is a twelve (12) month warranty period only applicable for these replacement parts.

### Exclusions

This warranty is for normal domestic and commercial use only and excludes any defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage, improper installation or installation by unlicensed plumber, products not installed to relevant National Standards and State Regulations.



#### Brisbane

Level 3 / 18 Wandoo Street  
Fortitude Valley QLD 4006

#### Sydney

80 Abercrombie Street  
Chippendale NSW 2008

#### Melbourne

206-208 Coventry Street  
South Melbourne VIC 3205

#### Perth

Unit 1 / 40 Collingwood Street  
Osborne Park WA 6017

#### Technical Advice

1300 356 717

#### Fax

1300 656 057

[www.argentaust.com.au](http://www.argentaust.com.au)

Australian Design Registration


AUST. DES. REGN. NO. 307305  
AUST. DES. REGN. NO. 307306  
AUST. DES. REGN. NO. 307308  
AUST. DES. REGN. NO. 307309

ARG-001-250, In-line Xera & Evo Wall Stops & Set V3.0




## Xera & Evo Wall Stop Xera & Evo Wall Sets


### INSTALLATION INSTRUCTIONS

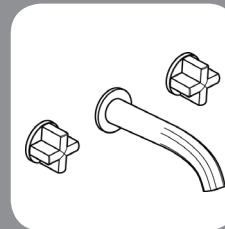


**106357**  
Xera Bath Wall Set

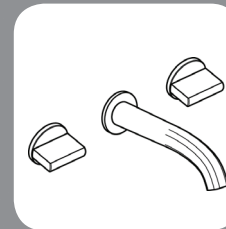


**106358**  
Evo Bath Wall Set

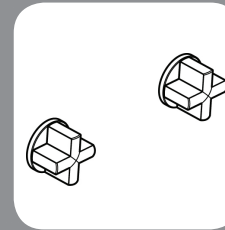


**111057**  
Xera Wall Stops

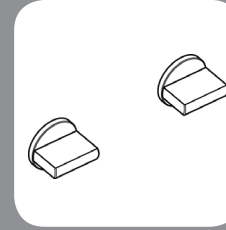

**111058**  
Evo Wall Stops

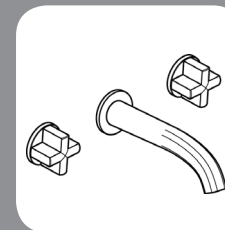

**105357**  
Xera Basin Wall Set 5Lpm

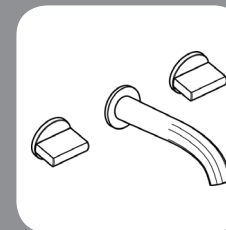

**105358**  
Evo Basin Wall Set 5Lpm



WELS 5 star rated  
Nominal flow rate 5Lpm

## MEASURE

Please note; Before starting the installation, measure from the face of the in wall breach to the finished wall, this must be between 28mm to 40mm.

## PREPERATION

In wall breach/combination is supplied by registered plumber/ installer. Ensure tap seat has a uniform smooth flat surface, square to the tap body face. If seat is worn reset using a parallel thread tap reseater. Hydroseal® brand recommended.

**NOTE: Head part supplied. Ceramic Disc Cartridge .For use in tap bodies made to Australian Standard AS3718.**

## IMPORTANT!

1. Do one complete wall stop first and test on your installation before cutting them both in case any additional adjustment is required. One spare thermal (A) barrier is supplied.

2. Make sure that the thermal barrier is cut as true as practical


3. Remove any swarf from the cut with a mild file.

4. Use a file to create a taper on any cut thread.

## MEASURE & CUT

See figure A

1. Once you have established the measurement required for this wall stop set, you can start the installation process. Go to the Assembly Table for cut recommendations. You may need to trim either or both of the following items, part (A) and part (D)

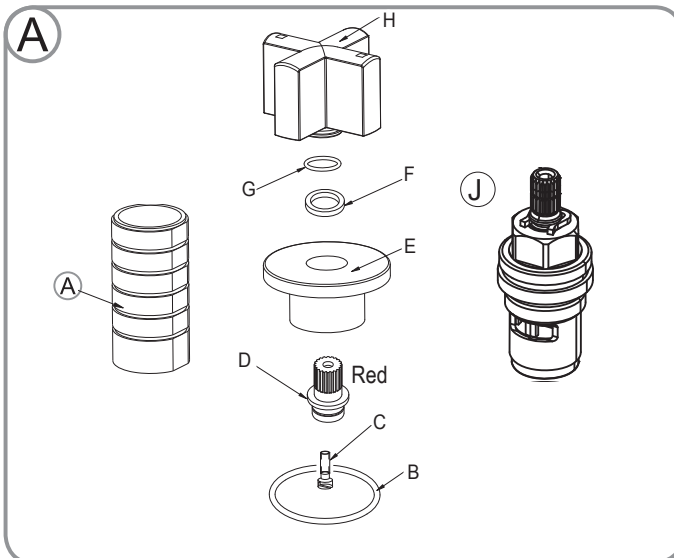

## FINAL ASSEMBLY

See figure B

2. Measure the distance between the in wall breach/ combination and the finished wall surface. Use this distance to calculate the correct length to cut the thermal barrier (A) based on the measurements in the Assembly Table

3. Cut the thermal barrier to the length indicated in the Assembly Table ensuring that the distance is calculated from the end with the internal thread that will attach to the headpart.

4. Using a mild file, clean up the cut on the thermal barrier, making sure the thread is clean and the cut is flat.

5. Screw both head parts provided (J) into the in wall breach/ combination firmly. Ensure red fibre washer is on the headpart in the correct position.

6. Before you fit the cut thermal barriers, test fit the assembled flange over head part to ensure the splines will engage, a minimum of 5mm engagement is required.

7. Attach the thermal barriers to the flange (E) **Cut one set 1st and test this before cutting both incase some adjustment is necessary. One spare thermal barrier supplied.**

8. Reassemble the flange assembly using the red TSE part (D), re-lubricate the 'O' ring (G) Shown in table A.


9. Holding the handle in the off position so it doesn't move, wind flange until it firmly touches the finished wall. Handle is in the off position when it is fully rotated anti clockwise and the hot and cold symbols are horizontal and facing outwards) See figure B.

10. If there is a noticeable gap between the back of the flange and the finished wall, recheck the Assembly Table recommendations and cut positions for accuracy.



11. Use the blue rubber flange installation ring provided to protect the base of the flange from damage, before tightening with a suitable tool.

## NOTE

Water Pressure; Refer AS/NZS 3500.1.2003 – Clause 3-3.4  
"Provision shall be made to ensure that the maximum static operating pressure at any outlet other than a fire service, within a building does not exceed 500KPA"

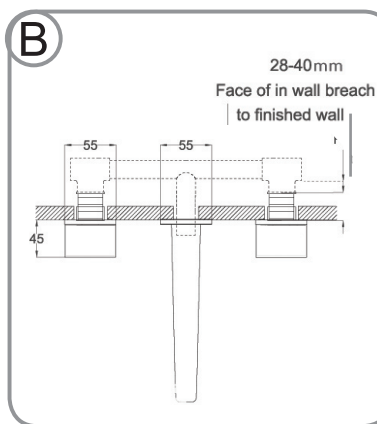

## CUTTING TEMPLATE

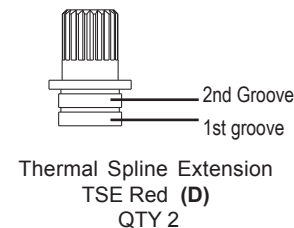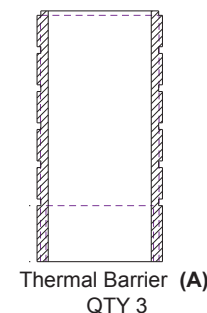

## ASSEMBLY TABLE

Depth Measurement : From finished wall to the face of combination / in wall breach	Length of thermal bar- rier (A) –Cuts required from internal thread end	TSE Red cut as required- cut as directed below
28mm	16mm	cut at 2nd groove from internal spline end
29mm	17mm	cut at 2nd groove from internal spline end
30mm	18mm	cut at 2nd groove from internal spline end
31mm	19mm	cut at 2nd groove from internal spline end
32mm	20mm	cut at 1st groove from internal spline end
33mm	21mm	cut at 1st groove from internal spline end
34mm	22mm	cut at 1st groove from internal spline end
35mm	23mm	cut at 1st groove from internal spline end
36mm	24mm	use as supplied, no cut required
37mm	25mm	use as supplied, no cut required
38mm	26mm	use as supplied, no cut required
39mm	27mm	use as supplied, no cut required
40mm	28mm	use as supplied, no cut required

A 5mm stackable trouble dome is available for installations where the in wall breach/ combination is less than 28mm from the face of the finished wall, item # 111500